

## **PAX S80 Restaurant/Retail** Quick Reference Guide

Josh Mandell (516) 835-0000 Josh@envoybusinesssystems.com



CREDIT CARD SALE		NFC SALE (CONT.)	
Display	Action	Display	Action
INPUT AMOUNT CREDIT SALE	<ol> <li>Enter sale amount, then press ENTER.</li> </ol>	ENTER SERVER ID:	4. Enter server number if prompted, then press <b>ENTER</b> . <i>RESTAURANT ONLY.</i>
Enter TIPI AMOUNT 0.00 R R	<ol> <li>Enter tip amount, then press ENTER. <i>RESTAURANT ONLY.</i></li> <li>Swipe the gradit cord</li> </ol>	Printing 62	<ol> <li>Terminal will begin printing receipt while processing the transaction.</li> </ol>
SWIPE CARD/INPUT ACCOUNT	<ol> <li>Swipe the creat card.</li> <li>Foter server number if</li> </ol>	Tear Slip> Press Any Key	<ul> <li>6. Press ENTER for a customer copy, or press</li> <li>CANCEL to return to the home screen.</li> </ul>
ENTER SERVER ID:	prompted, then press ENTER. RESTAURANT ONLY.	MANUALLY K Display	<b>EYED IN SALE</b>
Printing 6 8 6	5. Terminal will begin printing receipt while processing the transaction.	INPUT AMOUNT CREDIT SALE	1. Enter sale amount, then press ENTER.
Tear Slip> Press Any Key	6. Press ENTER for a customer copy, or press CANCEL to return to the home screen.	Enter TIP1 AMOUNT 0.00	2. Enter tip amount, then press ENTER. RESTAURANT ONLY.
NFC SALE	Action	SWIPE CARD/INPUT ACCOUNT	3. Type in the card number, then press ENTER.
INPUT AMOUNT CREDIT SALE	<ol> <li>Enter sale amount, then press ENTER.</li> </ol>	EXP. DATE:	<ol> <li>Enter the card's expiration date following the format of MMYY, then press ENTER.</li> </ol>
Enter TIP1 AMOUNT 0.00 R3 R4	<ol> <li>Enter tip amount, then press ENTER. <i>RESTAURANT ONLY.</i></li> <li>Tap the device just below.</li> </ol>	IS CARD PRESENT? 1. YES 2. NO 62 64 64	<ul> <li>5. If customer card is present, choose YES. If customer card is not present, choose NO and go to payt stop.</li> </ul>
SWIPE CARD/INPUT ACCOUNT	the display. The terminal will beep to let you know the transaction has been picked up.	ENTER SERVER ID:	6. Enter server number if prompted, then press ENTER. RESTAURANT ONLY

## MANUALLY KEYED IN SALE (CONT.) DEBIT SALE (CONT.)

Display	Action	Display	Action
ENTER CVV2:	7. Enter the CVV2 code, then press ENTER. If you do not have access to, or cannot	Please Enter PIN on the PIN Pad R	5. Enter the 4 digit PIN on the attached PIN Pad, then press ENTER.
CVV2 code is located on the back of the customer card, or the front of American Express cards.	read the CVV2 code, press ENTER to skip this step.	Printing P Printing P	6. Terminal will begin printing receipt while processing the transaction.
1. Want to bypass     Image: Comparison of the comparison	Enter the zin code	Tear Slip> Press Any Key P3	7. Press ENTER for a customer copy, or press CANCEL to return to the home screen
ENTER ZIP CODE:	of the card's billing address, then press ENTER.	EBT SALE	
Printing	<b>10.</b> Terminal will begin printing receipt while processing the transaction.	PRESS ENTER EBT SALE	<ol> <li>Press F3 twice to toggle the payment type to EBT, then press ENTER.</li> </ol>
F1 Tear Slip> Press Any Key R3 R4	11. Press ENTER for a customer copy, or press CANCEL to return to the home screen.	SELECT EBT TYPE:F11. FoodStampf22. CashBenefitf33. Voucherf4	2. Select the type of sale.
DEBIT SALE	Action	EBT SALE P AMOUNT 0.00 P R R	<b>3.</b> Enter the sale amount, then press <b>ENTER</b> .
INPUT AMOUNT DEBIT SALE	1. Press F3 to toggle the payment type to DEBIT, enter sale amount, then press	SWIPE CARD/INPUT ACCOUNT	<b>4.</b> Swipe the card or key in the card number, then press <b>ENTER</b> .
Enter TIP1 P1 P2	ENTER. 2. Enter tip amount, then press ENTER. <i>RESTAURANT ONLY.</i>	ENTER SERVER ID:	<ol> <li>Enter server number if prompted, then press ENTER.</li> <li>RESTAURANT ONLY.</li> </ol>
SWIPE CARD	<b>3.</b> Swipe the debit card.	Please Enter PIN on the PIN Pad	6. Enter the 4 digit PIN on the attached PIN Pad, then press <b>ENTER</b> .
ENTER SERVER ID:	<b>4.</b> Enter server number if prompted, then press <b>ENTER</b> .	Printing Printi	<b>7.</b> Terminal will begin printing receipt while processing the transaction.
	RESTAURANT ONLY.	_	

EBT SALE (CONT.)	)	VOID	
Display	Action	Display	Action
Tear Slip> Press Any Key P4	8. Press ENTER for a customer copy, or press CANCEL to return to the home	INPUT AMOUNT CREDIT SALE	1. Press the FUNC key located on the top right corner of the keypad.
FORCED SALE	Action	FUNCTION MENU: 1. Report 2. Batch 3. Review 4. Find F1 F1 F2 F3 F4	2. Press 7 to select the <b>Void</b> function.
INPUT AMOUNT	<ol> <li>Press F4 three times to toggle the sale type</li> </ol>	ENTER SERVER ID:	3. Enter server number if prompted, then press
CREDIT F3 FORCED F4	to <b>FORCED</b> , enter sale amount, then press <b>ENTER</b> .		RESTAURANT ONLY.
Enter TIP1 AMOUNT 0.00	2. Enter tip amount, then press ENTER. RESTAURANT ONLY.	ENTER TRANS #: 3 6	<ol> <li>Effect the transaction number of the sale you would like to void, then press ENTER.</li> </ol>
SWIPE CARD/INPUT ACCOUNT	<b>3.</b> Swipe the card or key in the card number, then press <b>ENTER</b> .	- #0000 SALE AMOUNT 0.00 *********1234 R	<ol> <li>Screen will display the transaction details. If display is correct, press</li> <li>ENTER. If display is not correct, press CANCEL to return to the home screen</li> </ol>
ENTER AUTH. #	<ol> <li>Enter the 6 digit authorization number, then press ENTER.</li> <li>Enter server number if</li> </ol>	Void #0000? ENTR=YES, CANC=NO B 4	<ul> <li>6. Confirm voiding the transaction by pressing ENTER, or press CANCEL to return to the home</li> </ul>
ENTER SERVER ID:	prompted, then press ENTER. RESTAURANT ONLY.	Printing	<ul><li>screen.</li><li>7. Terminal will begin printing receipt while processing</li></ul>
Printing	6. Terminal will begin printing receipt		the transaction.
	transaction.	- Press Any Key	8. Press ENTER for a customer copy, or press CANCEL to return to the
Tear Slip> [2 Press Any Key [3 [4]	customer copy, or press <b>CANCEL</b> to return to the home	REFUND	nome screen.
	screen.	Display	Action
		INPUT AMOUNT CREDIT SALE	1. Press the FUNC key located on the top right corner of the keypad.
		FUNCTION MENU:          FUNCTION MENU:       FI         1. Report       F2         2. Batch       F3         3. Review       F4	2. Press 8 to select the <b>Return</b> function.

<b>REFUND</b> (CONT.)		REPORTS (CONT.)	
Display	Action	Display	Action
ENTER PASSWORD:	<b>3.</b> Enter the Manager's Password located at the end of this document.	Printing	<ul> <li>Forminal will print a report</li> <li>of the current batch.</li> <li>Image: A state of the current batch.</li> <li>Image: A state of the current batch.</li> </ul>
SELECT PMT TYPE:F11. CREDITF22. DEBITF33. EBTF4	<ol> <li>Select your payment type.</li> </ol>	<b>REPRINT</b> Display	Action
CREDIT RETURN AMOUNT 0.00 R R	5. Enter the sale amount, then press ENTER.	INPUT AMOUNT CREDIT SALE	<ul> <li>Press the FUNC key</li> <li>located on the top right</li> <li>corner of the keypad.</li> </ul>
SWIPE CARD/INPUT ACCOUNT	6. Swipe the card or key in the card number, then press ENTER.	FUNCTION MENU: 1. Report 2. Batch 3. Review 4. Find	<ul> <li>Press 6 to select the</li> <li>Reprint function.</li> </ul>
ENTER SERVER ID:	7. Enter server number if prompted, then press ENTER.	RECEIPT COPY: 1. Last Cust. Rcpt 2. Any Receipt	<ol> <li>Press 1 to print the last transaction's receipt.</li> <li>Press 2 to find a previous transaction's receipt.</li> </ol>
Printing	8. Terminal will begin printing receipt while processing the	SELECT PMT TYPE: 1.CREDIT 2. DEBIT 3. EBT	<ul> <li>9 4. Select the payment type.</li> <li>10</li> <li>12</li> <li>13</li> <li>14</li> <li>14</li></ul>
Tear Slip> Press Any Key	9. Press ENTER for a customer copy, or press CANCEL to	ENTER TRANS #:	<ul> <li>5. Enter the transaction number of the receipt you</li> <li>would like to reprint, then press ENTER.</li> </ul>
REPORTS	return to the home screen.	CHOOSE COPY TYPE 1. Customer 2. Merchant	<ul> <li>Press 1 to print the customer copy.</li> <li>Press 2 to print the merchant copy.</li> </ul>
Display	Action		
INPUT AMOUNT CREDIT SALE	<ol> <li>Press the FUNC key located on the top right corner of the keypad.</li> </ol>		
FUNCTION MENU:FI1.Report622. Batch633. Review644. Find64	2. Press 1 to select the <b>Report</b> function.	_	
ENTER PASSWORD:	<b>3.</b> Enter the Manager's Password located at the end of this document.	_	

SETTI EMENT			
Display	Action	Display	Action
INPUT AMOUNT CREDIT SALE	1. Press the FUNC key located on the top right corner of the keypad.	INPUT AMOUNT CREDIT SALE	1. Press the FUNC key located on the top right corner of the keypad.
FUNCTION MENU:     1       1. Report     62       2. Batch     63       3. Review     63       4. Find     64	2. Press 2 to select the <b>Batch</b> function.	FUNCTION MENU:FI1. ReportF22. BatchF33. ReviewF34. FindF4	2. Press the up arrow key to highlight <b>Tip Menu</b> , then press <b>ENTER</b> .
BATCH MENU 1. Batch Close  R R R R	3. Press ENTER to close the current batch.	TIP MENU:     FI       1. Scroll Untipped     F2       2. By Invoice     F3       3. By Srvr/Clerk#     F3       4. By Trans.#     F4	<b>3.</b> Press 4 to find the sale by the transaction number.
CLOSE W/UNTIPPED ENTER=Continue	<ol> <li>If all tips have been added, press ENTER to proceed. Otherwise press CANCEL to go</li> </ol>	ENTER TRANS #:	<ol> <li>Enter the transaction number of the sale you would like to adjust, then press ENTER.</li> </ol>
	back and add all tips. RESTAURANT ONLY.	#0000 SALE F1 AMOUNT 0.00 F2	5. Screen will display the transaction details. If
Printing	<b>5.</b> Terminal will close the batch and print a final report.	************1234 <table-cell></table-cell>	display is correct, press ENTER. If display is not correct, press CANCEL to return to the home screen.
		TIP1:         FI           0.00         F2           New Rate:         63           0.00         F2	6. Enter in the tip amount, then press ENTER.

F1 F2 F3 F4

F1 F2 F3 F4

TIP1:0.00 ENTR=YES, CANC=NO

Total: 0.00

**7.** Confirm the tip amount by

8. Display will show the new transaction total,

pressing **ENTER**, or press **CANCEL** to return to the previous screen.

then return to the ENTER TRANS # screen.